THINK SAFETY FIRST

Practice Safety First. Safety starts with you! YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THE INCLUDED INSTRUCTION MANUAL AND ALL OTHER INSTRUCTIONAL MATERIALS PROVIDED BEFORE USING THIS CROSSBOW.



OWNERS INSTRUCTION MANUAL MODEL 1093 - FURIOUSTM PRO 9.5

YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE USING THIS CROSSBOW!

A WARNING CONTACT KILLER INSTINCT® AT 810-626-3026 OR <u>CONTACT@KILLERCROSSBOWS.COM</u> WITH QUESTIONS.

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!

WARNINGS OF GREAT IMPORTANCE ARE FOUND ON FOLLOWING PAGES:

Introduction	2
Safety Information	3
No Alterations	4
Manual Safety	9
Crossbow Arrow Safety	10

Cocking Crossbow	10
Hand Placement	12
Loading & Shooting	13
Unloading	13

OTHER WARNINGS AND CAUTIONS APPEAR THROUGHOUT THE MANUAL.



CLAIM NOW!

KEEP INSTRUCTION MANUAL WITH CROSSBOW

THIS INSTRUCTION MANUAL MUST ALWAYS ACCOMPANY THIS CROSSBOW AND BE TRANSFERRED WITH IT UPON CHANGE OF OWNERSHIP, WHEN LOANED, OR PRESENTED TO ANOTHER PERSON.

TABLE OF CONTENTS

Introduction	2
Safety Information	3
No Alterations	4
Nomenclature	4
Crossbow Assembly	6
Trigger Box & Anti-Dry Fire	9
Manual Safety	9
Crossbow Arrow Safety	10
Cocking Crossbow	10
Proper Finger, Thumb &	12
Hand Placement	
Loading & Shooting	13
Unloading	13
Maintenance, Care & Storage	14
Trouble Shooting & Records	15
Warranty	16
Notes	17
Registration	18





QUESTIONS? - CONTACT CUSTOMER SERVICE



INTRODUCTION

Congratulations on your new Killer Instinct[®] crossbow purchase! Thank you for your support. Your crossbow has been designed, manufactured, tested, and delivered to be safe when used with all the instructional information provided. **Before assembly,** make the first step with your new crossbow be to read and thoroughly understand all the information and instructional materials included with this product. Read and understand the Owners Instructional Manual from cover to cover. **YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE USING THIS CROSSBOW! THIS INCLUDES ANY INFORMATION PROVIDED ON THE CROSSBOW, ARROWS, PACKAGING, HARDWARE, ACCESSORIES, OR OTHER ITEMS PROVIDED. CONTACT KILLER INSTINCT® AT 810-626-3026 OR CONTACT@KILLERCROSSBOWS.COM WITH ANY QUESTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!** When used in accordance with all the instructional information provided and with proper care and maintenance, your crossbow will provide years of service. Keep and save all instructional materials provided. If crossbow transfers ownership, loaned or presented to another person, Owners Instruction Manual must be kept with crossbow and new owner/borrower must read and understand all instructions and warnings in the Owners Instruction Manual before using crossbow.

A crossbow is a deadly weapon! As such, crossbows should be treated as firearms in regards to care and safety.

The five basic rules of firearms & crossbows safety:

- Always point a firearm/crossbow in a safe direction.
- Treat every firearm/crossbow as if it were loaded and never assume a firearm/crossbow is unloaded.
- Keep your finger out of the trigger guard and off the trigger until ready to shoot.
- Keep all parts of body and clothing out of path of bow string and cables of crossbow and out of path of projectile of firearm/crossbow.

- Be sure of your target and what is beyond your target.

Crossbows by design, use a bow string and shoot projectiles at high rates of speed and should only be used by those that have completed a Hunter's Safety Course or trained by a qualified professional. Always use caution to keep all parts of body and clothing out of path of bow string and cables. High speed moving bow strings can cause serious injury if contact occurs such as finger and thumb amputation. Know your target. Projectiles that do not remain on target can cause serious injury or death. Wear safety glasses when cocking, loading and shooting any crossbow. Think Safety First and Practice Safety First. Safety Starts with You! YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL AND ALL OTHER INSTRUCTIONAL MATERIALS PROVIDED BEFORE USING THIS CROSSBOW



CROSSBOW USE IS FOR EXPERIENCED USERS ONLY! CROSSBOWS SHOULD ONLY BE USED BY THOSE THAT HAVE COMPLETED A HUNTER'S SAFETY COURSE OR TRAINED BY A QUALIFIED PROFESSIONAL.

QUESTIONS? - CONTACT CUSTOMER SERVICE









IMPORTANT SAFETY INFORMATION:

Crossbow is a deadly weapon! Always keep crossbow pointed in safe direction. Never point at or toward person(s) or at or toward anything you do not intend to shoot.

Always be certain of intended target and what is beyond it before shooting. Never shoot at noise or movement.

Always be aware of your surroundings and ensure no other person or animal is between you and target area.

Always make certain others are well behind you before you shoot.

Never shoot straight up or in any direction that may endanger people or other objects.

Never shoot at hard surfaces or at surface of water. Arrow may bounce back or ricochet and hit someone or an unintended target.

Always keep thumb and fingers below flight rail, string, barrel and behind cables.

Always keep all parts of body and clothing out of path of bow string and cables.

A WARNING To prevent accidental discharge, always keep crossbow safety on 'SAFE'. Only position safety to 'FIRE' when ready to shoot.

> Never dry fire crossbow (fire without arrow loaded). This will void warranty, damage crossbow.

Never put your finger on trigger until you are ready to shoot as you could accidently fire crossbow causing serious injury or death.

Never store or transport crossbow in cocked or loaded position. Accidental discharge could occur.

Keep crossbow out of reach of children!

 
When hunting from treestands or at heights always wear full body harness (not included) that has been certified by a Third-Party Testing Facility that meets or exceeds Industry Standards.

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!

- Do not modify crossbow or remove or deactivate crossbow's safety features.
- Never walk, stalk, or carry crossbow with arrow loaded in crossbow. It is acceptable to carry a cocked but unloaded crossbow.
- Never fire crossbow if branches, tree, blind windows/walls, or obstructions may contact crossbow or crossbow limbs in its release path.
- Always keep crossbow string and cables away from sharp objects as they may cut string or cables. DO NOT use if string or cables are cut or show signs of wear, contact KILLER INSTINCT[®] at 810-626-3026 or e-mail support at contact@killercrossbows.com or take to an authorized KILLER INSTINCT[®] dealer for inspection.
- If under age of 18 do not use without adult supervision.
- Always place broadheads in quiver when transporting or storing crossbow to prevent contact with string/cables.
- Never use crossbow while taking or under influence of drugs (even prescription drugs) or alcohol.
- Wear safety glasses when cocking, loading and shooting any crossbow.
- Always obey all safety rules and laws covering ownership and use of this crossbow in your state, hunting or shooting area. Locate and read all such rules prior to using crossbow.
- Only use crossbow for intended use of hunting and target shooting. Do not use for any other purpose!

QUESTIONS? - CONTACT CUSTOMER SERVICE







IMPORTANT SAFETY INFORMATION CONTINUED:

- Do not climb up or down a tree with crossbow or hoist loaded crossbow. Always unload crossbow and use hoist rope to lift up and down tree or elevated hunting platform.
- Never modify your crossbow in any way by making repairs, replacing parts, altering, adding or attaching anything to it other than KI accessories designed specifically for KILLER INSTINCT[®] crossbows.
- When target practicing, always setup proper crossbow target and backstop in safe open area with nothing beyond target you do not intend to shoot.
- When cocking crossbow use proper lifting techniques to avoid injury to back (lift with arms and shoulders).
- Never use this product when feeling ill, nauseous, dizzy or if you have pre-existing medical condition that could cause a problem cocking or shooting crossbow.
- Examine crossbow and arrows after every shot for worn, loose, damaged or missing parts and cracks or damage to arrows. If damage is suspected, DO NOT use crossbow and arrow(s), contact KILLER INSTINCT[®] at 810-626-3026 or e-mail support at <u>contact@killercrossbows.com</u>.
- Do not use crossbow if it is not in top working condition, contact KILLER INSTINCT[®] at 810-626-3026 or e-mail support at <u>contact@killercrossbows.com</u> for assistance.

NO ALTERATIONS OR ADJUSTMENTS:



Do not modify, remove, or deactivate crossbow's safety features. Do not modify crossbow in any way by making repairs, replacing parts, altering, adding or attaching anything to it. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!

NO ALTERATIONS:

This product is designed to function properly in its original condition. Alterations can make it unsafe. Do not alter, add, or substitute parts or accessories not made by KILLER INSTINCT[®].

NO ADJUSTMENT – LIMB BOLTS:

Do not attempt to adjust limb bolts by tightening or loosening bolts. Limb bolts are factory adjusted to specific torque specifications to optimize crossbow performance.

Do not attempt to change string, cables or limbs without proper tools and instruction. Always have qualified Killer Instinct[™] professional or authorized KILLER INSTINCT[®] dealer perform these maintenance procedures. NOTE: A crossbow press and qualified technician is required to change/install string, cables, limbs, cam assemblies, etc.

FURIOUS[™] PRO 9.5 NOMENCLATURE:

- Unpack and Check
- Review & Confirm all items are included in Parts List. If they are not, stop and contact KILLER INSTINCT[®] customer service before continuing or using this product.

QUESTIONS? - CONTACT CUSTOMER SERVICE



810-626-3026

KILLERCROSSBOWS.COM



FURIOUS[™] PRO 9.5 NOMENCLATURE CONTINUED:


!! DO NOT RETURN TO STORE !!

UNPACK to assure all items are included.

If an item is missing, CONTACT KILLER INSTINCT® CUSTOMER SERVICE

Qty	Part No.	<u>Description</u>
1	SPK-1093-FSA	FURIOUS™ Pro 9.5 Stock Assembly (Barrel - SPK-1093-Barrel, CCS Stock –
		SPK-0022-BLK, Pro Series Trigger Box – SPK-0014, Forearm Grip – SPK-1093-FG,
		Pistol Grip w/Hardware – SPK-0015-GGN).
1	SPK-1093-FE	Front End Assembly (Riser Assembly – SPK-1093-RA , Limb Set – SPK-1093-LS,
		Cam Assembly Set – SPK-1093-CA, Cables – SPK-1093-C, String – SPK-1093-S, String
		Suppressor Set – SPK-1093-SSS, Front End Assembly Hardware – SPK-1093-RB).
1	SPK-0004	Cable Slide
1	SPK-2019-FS	MAX™ Footpad Stirrup and Assembly Hardware
1	SPK-LUMIX-IR-E	Lumix 4x32 IR-E W/Scope Rings and Assembly Hardware (CR2032 Battery – SPK-SCBATT)
1	SPK-1116-B	Rail Lube
1	SPK-1069	Rope Cocker with Sled
1	SPK-1077-KI	5-Bolt Quiver
1	SPK-1076-V2	Tactical Side Mount Quiver Mount and Assembly Hardware
3	SPK-1064-KI	20" HYPR™ Bolts w/Half Moon Nocks & 100 Gr. 11/32 Field Points (SPK- 1060-TIP)
1	SPK-1093-IM	Instructions and Safety Manual

uctions and Safety Manual

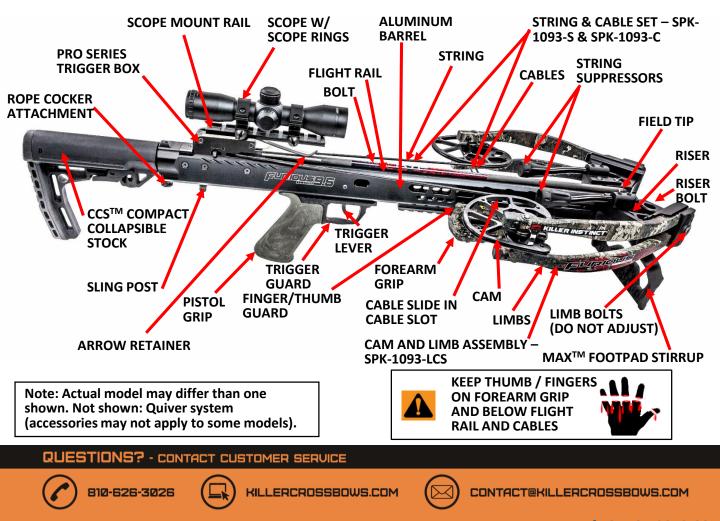


FURIOUS[™] PRO 9.5 CROSSBOW ASSEMBLY:

RAIL LUBE

PRIOR TO ASSEMBLY apply Rail Lube to string, cables, both sides of cable slide, and flight rail. RAIL LUBE MUST BE APPLIED TO STRING, CABLES AND FLIGHT RAIL ON REGULAR BASIS TO PREVENT WEAR. Apply as often as needed or when rail lube appears to have worn off flight rail, string or cables.



DO NOT MODIFY CROSSBOW! QUESTIONS CALL 810-626-3026

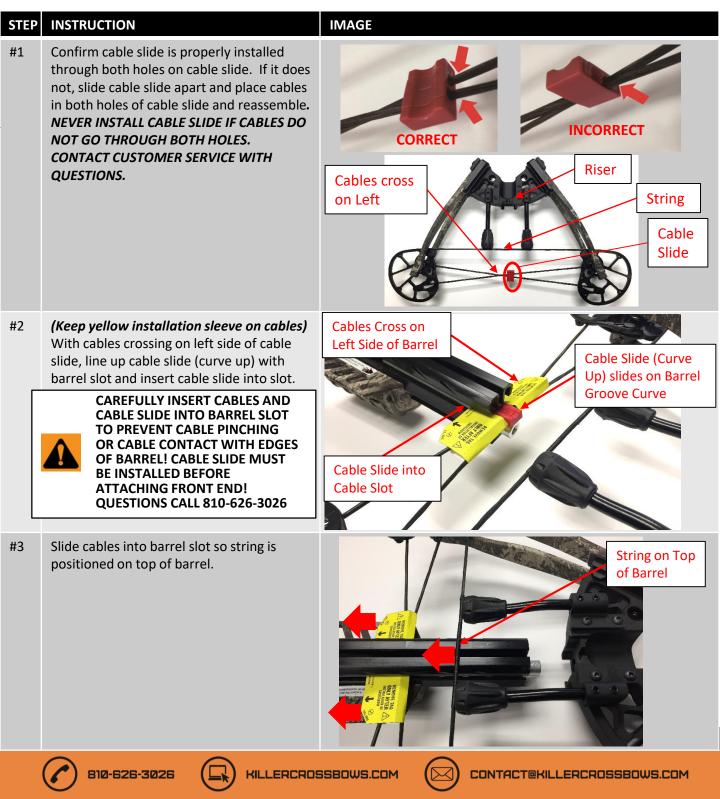

FURIOUS™ PRO 9.5 CROSSBOW ASSEMBLY CONTINUED:

STEP	INSTRUCTION	IMAGE
#4	Before positioning riser next to barrel, remove Yellow Cable Slide Protector Sleeve from Cables by pulling each side of sleeve. REMOVE CABLE SLIDE PROTECTOR SLEEVE. DO NOT USE BLADE OR SCISSORS.	REMOVE TAG ONLY AFTER INSTALLATION OF CROSSBOW
#5	Push riser completely next to barrel, making sure riser lines up with barrel.	String on Top of Barrel Riser lines up with Barrel
#6	Place riser bolt w/lock washer and flat washer through Max [™] Footpad Stirrup hole. Position Max [™] Footpad Stirrup next to the middle hole on the riser so stirrup extends out in front and below crossbow.	Riser Bolt Position Max™ Footpad Stirrup stirrup extends out in front ad below crossbow.
#7	Place riser bolt w/lock washer, flat washer and Max [™] Footpad Stirrup into middle hole of the riser and thread riser bolt into the barrel. Note: Make sure the middle Allen set screw does not interfere with the Riser bolt. Securely tighten riser bolt so riser contacts barrel and there is no gap between riser and barrel. Tighten middle Allen set screw to lock riser bolt in place. Double check Allen set screws are securely tightened. DO NOT SHOOT BOW WITH ANY VISIBLE DAMAGE TO STRING OR CABLES.	Riser
	BIØ-626-3026 RILLERCE	

QUIVER, SCOPES, AND STRING SUPPRESSORS ASSEMBLY:

	INSTRUCTION	IMAGE
QUIVER	Attach side quiver bracket to picatinny rail under barrel using included hardware. Attach quiver base to quiver bracket using included hardware. Attach quiver to base and fold locking lever flat to lock quiver in place.	Attach Quiver Base
LUMIX SCOPE	Attach Scope to picatinny rail on top of trigger box using included scope rings and hardware. Always make sure screw on scope ring clamp is fully seated in picatinny grooves and all screws are tight.	Attach Scope Rings & Scope to Picatinny Rail
STRING SUPPRESSOR	Position string suppressor so gap between suppressor and string is approximately 1/32" wide (about the width of a credit card). Securely tighten screws.	1/32" Space Between Suppressor and String

QUESTIONS? - CONTACT CUSTOMER SERVICE



KILLERCROSSBOWS.COM



KI PRO SERIES TRIGGER BOX AND ANTI-DRY FIRE (FURIOUS™ PRO 9.5 MODEL):



Never deactivate Anti-Dry Fire mechanism and fire crossbow when crossbow arrow is not loaded allowing crossbow to be dry fired.

Never Dry Fire crossbow. This will void warranty and may cause serious injury or death.

Always keep crossbow safety in 'SAFE' position until ready to shoot.



ANTI-DRY FIRE MECHANISM:

Mechanism prevents crossbow from firing when there is no arrow/bolt loaded in crossbow.

OPERATION OF KI MANUAL SAFETY (FURIOUS™ PRO 9.5 *MODEL***):**



 
Even though crossbow is equipped with auto engaging safety, always check to assure safety is in 'SAFE' position when crossbow is in cocked position. Always keep crossbow safety in 'SAFE' position until ready to shoot.

IMAGE

INSTRUCTION

SAFETY IN 'SAFE' (S) POSITION

Safety is in 'SAFE' position when manual safety is in back position (furthest from string).



SAFETY IN 'FIRE' (F) POSITION

Safety is in 'FIRE' position when safety is in forward position (closest to string).



Crossbow will fire when trigger is pulled.



QUESTIONS? - CONTACT CUSTOMER SERVICE





KILLERCROSSBOWS.COM



CROSSBOW ARROW/BOLT SAFETY:



Only use arrow(s) with half moon nocks.

Only use finished arrow(s) (arrow and point) weighing at least 370 grains and minimum length 20 inches. Under weight arrows can damage crossbow.

Failure to follow these instructions can result in serious injury or death!

CROSSBOW ARROW/BOLT SELECTION:

Always use a finished arrow(s) (arrow and point) weighing at least 370 grains and minimum length of 20 inches. Always use arrow(s) with half moon nocks.

Always use field point or broadhead installed on arrow. NEVER SHOOT CROSSBOW ARROW WITHOUT FIELD POINT OR BROADHEAD.



Always inspect arrow(s) before every shot for damage including but not limited to bends, cracks, nicks, cuts, fractures, damaged nock, missing insert or point. DO NOT SHOOT A DAMAGED ARROW OR IF DAMAGE IS SUSPECTED. View <u>www.safearrow.info</u> for instructions to inspect bolts.

Failure to follow these instructions can result in serious injury or death!

INSPECTING CROSSBOW ARROWS/BOLTS:

Always inspect arrow prior to every shot. View <u>www.safearrow.info</u> for instructions on how to inspect arrows. Damage can occur from impacts with hard objects, other arrows or after being shot into a game animal. A damaged arrow can break upon shot resulting in injury to you, bystanders and damage crossbow.

- Slowly run your fingers along entire length of arrow and nock, feeling and looking for bends, cracks, nicks, cuts, fractures, splits, dents or other marks that could indicate damage. If damaged or suspect damage do not shoot arrow.
- 2. Grab arrow above point and below nock, then flex arrow (bending away from you and others) with 0.5 to 1 inch deflection and listen for cracking noises. Repeat 5 or 6 times rotating arrow between each flex. If you feel or hear cracking, arrow has been damaged. Do not shoot arrow.
- 3. While holding both ends of arrow, twist shaft in both directions. If arrow relaxes or twists easily, arrow has been damaged. Do not shoot arrow.
- 4. Always check all arrow components prior to shooting. Tighten loose components. Loose components can cause unbalanced flight and may partial dry fire crossbow.

AWARNING

Never shoot crossbow arrow(s) if you observe or suspect damage! Discard damaged arrow.

COCKING CROSSBOW:

Do not cock crossbow by hand as possible back, shoulder or finger injuries may occur. Always use rope cocking device or KI approved crank cocker (*sold separately*) to cock crossbow.



Never cock or use crossbow when feeling ill, nauseous, dizzy or if you have prior medical condition that could cause a problem cocking or shooting crossbow.

When cocking crossbow use proper lifting techniques to avoid injury to back (lift with arms and shoulders).

Do not de-cock crossbow with a cocking device or by any other means. (See UNLOADING CROSSBOW section on page 13 to de-cock crossbow)

USING ROPE COCKING DEVICE:

IMPORTANT NOTE: ALWAYS USE ROPE COCKING DEVICE OR KI APPROVED CRANK COCKER (SOLD SEPERATELY). THESE DEVICES EVENLY PULL STRING TO COCKED POSITION RESULTING IN IMPROVED ACCURACY AND TIGHTER GROUPS.

QUESTIONS? - CONTACT CUSTOMER SERVICE





KILLERCROSSBOWS.COM



COCKING CROSSBOW (CONTINUED):

STEP	INSTRUCTION	IMAGE
#1	With crossbow unloaded, place crossbow safety in fire position (automatically moves to safe position when cocked). Place crossbow stirrup on ground (stirrup down and butt stock up). Step on and insert foot onto Max [™] Footpad Stirrup so foot covers stirrup and stirrup rests in middle of foot.	
#2	Pull rope behind cocker sled and place rope overtop and behind stock while keeping sled above stock. Place rope loop behind stock onto Rope Cocker Attachment. Note – Make sure not to place rope on sling post below Rope Cocker Attachment.	
#3	Leaning over crossbow extend rope cocker sled overtop of scope and attach hooks to crossbow string so hooks on each side of barrel. Make sure hooks are facing down. <i>Note – String is closest</i> <i>to string suppressors.</i>	
#4	Keeping foot on stirrup and stirrup flat on ground, grab handles and pull up and back towards your hips (using legs, shoulders and arms) until string fully engages into trigger box assembly. Slowly release tension and remove sled and Rope Cocker from crossbow. Crossbow is now Cocked.	
#5	BOX BEFORE RELEASING TENSION ON ROPE Even though safety automatically engages when cocked, make certain crossbow is in 'SAFE' position (back position furthest from string).	
	QUESTIONS? - CONTACT CUSTOMER S	

KILLERCROSSBOWS.COM



PROPER FINGER, THUMB, AND HAND PLACEMENT:



Always keep thumb and fingers below string, flight rail, barrel and behind /below cables.

Failure to do so may result in serious injury to hand, including possible thumb or finger amputation.









KILLERCROSSBOWS.COM



LOADING AND SHOOTING:

LOADING AND SHOOTING:				
STEP	INSTRUCTION	IMAGE		
#1	 Loading Arrow – Keeping hand in 'safe hand area' place a Killer Instinct® recommended crossbow arrow into flight groove on top of barrel (odd color vane down) into flight groove ensuring curve of nock matches curve of string. If not orientate crossbow arrow so nock curve matches string curve. Keeping hand in 'safe hand area', slide arrow back under arrow retainer until curve of nock rests solidly next to string. 			
	Always keep crossbow aimed in safe direction during oading arrow and when loaded. Before shooting always make sure arrow nock rests irmly next to string to prevent dry firing crossbow, which could cause bodily injury and/or void warranty.			
#2	Shooting – Crossbow is ready to shoot. With fingers/thumb on forearm grip, aim, push safety to 'FIRE' position and slowly squeeze trigger to shoot. Always keep crossbow safety in 'SAFE' Always keep thumb. fingers and any o	position until ready to shoot. ther body appendages below and away from		
AW	ARNING Always keep crossbow aimed in safe d Always be certain of intended target a Never shoot straight up or in any direc Never shoot at hard surfaces or at surf back or ricochet and hit someone or a	ms. irmly next to string. lirection during loading and when loaded. and what is beyond it before shooting. ction that may endanger people or other objects. face of water. Arrow may be damaged, bounce		
#3	Sighting In Scope – Shoot at 10 yards using top scope reticle to confirm you are close to bulls eye. Make windage/elevation adjustments to get closer to bullseye. <i>Approximately 16 clicks = 1" @ 20 yards.</i> Increase distance to 20 yards and fine tune scope. Continue shooting at additional yardages using lower scope reticles. Lower reticles are for greater distances.	NOTE: Each reticle line represents approximately 10 yard increments (using 400 grain total arrow weight). This may vary with aftermarket arrows and different weight field tips / broadheads. SHOOTING TIP: For increased accuracy and tighter groups, follow through with your shot by watching arrow hit target through scope.		
UNLOA	ADING CROSSBOW:			
		nmanded arrow to unload crossbow		



Always use KILLER INSTINCT[®] recommended arrow to unload crossbow. Do not de-cock crossbow by hand, with cocking rope, Crank Cocker or by any other means other than shooting an arrow or appropriate discharge arrow.

UNLOADING CROSSBOW:

Recommended and safest way to unload crossbow is to fire arrow into suitable target or rock-free ground. If firing into ground, make sure ground is not frozen or hard and shoot at point approximately 4 to 5 feet in front of you at 45 degree angle. Firing at greater distances may result in lost arrow in dirt or ricochet.

TIME ALLOWED TO KEEP CROSSBOW COCKED:

Crossbow can remain cocked 12 hours. Do not leave crossbow cocked overnight or when transporting.

QUESTIONS? - CONTACT CUSTOMER SERVICE





KILLERCROSSBOWS.COM



MAINTENANCE, CARE AND STORAGE:



Always examine crossbow and crossbow arrows after every shot for worn, loose, damaged or missing parts and cracks or damage to arrows. DO NOT use worn or damaged crossbow or crossbow arrow(s). Always store crossbow uncocked and out of reach of children.

SCHEDULE	MAINTENANCE
PRIOR TO EVERY SHOT	Thoroughly check crossbow and crossbow arrow for worn, loose, damaged or missing parts every time you use crossbow. Do not use worn or damaged crossbow or crossbow arrow(s).
PRIOR TO EVERY SHOT	Check and confirm arrow retainer is in good working order as it is designed to apply consistent downward pressure on arrow.
PRIOR TO FIRST SHOT EVERY 5 – 10 SHOTS	Lube flight rail with KI's rail lube to increase arrow speed and reduce friction to extend life of string, serving and cables. Reapply rail lube on flight rail, string and cables as often as needed or after every 5 to 10 shots.
AFTER INITIAL 20 SHOTS ANNUALLY OR AS NEEDED	Check screws/bolts for tightness on crossbow scope base, scope rings, riser bolt, quiver base and string suppressors.
ANNUALLY OR AS NEEDED	Annually or as needed apply rail lube to cable slide.
IMMEDIATE IF WEAR IS DETECTED EVERY 2 YEARS	Immediately replace worn, cut or frayed string, serving and cables prior to shooting. Keep string, serving and cables lubed with KI rail lube. KI recommends replacing string, serving and cables every two years in normal hunting/shooting conditions or sooner if signs of wear exist.
EVERY 3 YEARS	Free 3 year service inspection. Take your crossbow to an authorized KILLER INSTINCT [®] retail dealer or contact Customer Service at 810-626-3026 or at <u>contact@killercrossbows.com</u> for crossbow inspection and warranty retention.
IMPORTANT	KILLER INSTINCT [®] and KILLER INSTINCT [®] authorized dealers are only repair facilities authorized to open or disassemble crossbow or make repairs/replacements of strings, serving, cables, limbs, trigger boxes, barrels, etc. Unauthorized repairs may void warranty. If repairs are needed, contact Customer Service at 810-626-3026 or e-mail support at <u>contact@killercrossbows.com</u> for assistance.

CARE

Keep flight rail, cams, cables, string, trigger box and trigger clean and free of debris, mud, dirt, etc.

After exposing crossbow to damp or wet conditions, completely dry off crossbow before storing.

Do not expose crossbow in excessive heat such as leaving in an automobile on a hot day.

STORAGE

Store crossbow in uncocked position and out of reach of children.

Store indoors in a cool dry location away from excessive heat and moisture.

QUESTIONS? - CONTACT CUSTOMER SERVICE



810-626-3026

KILLERCROSSBOWS.COM



TROUBLE SHOOTING:

	PROBLEM	SOLUTION
#1	Burning smell after shot	Re-apply KI rail lube to flight rail, string, cables and/or cable slide. Keep fingers out of cable slot on barrel.
#2	String, serving and/or cables are fuzzy	Apply thin coating of rail lube on string, serving and cables and rub lube into string and cables rubbing between your fingers.
#3	String and/or cable serving is coming apart or separating	Do not use crossbow. Replace string and cable or reserve string and cable. Take your crossbow to an authorized KILLER INSTINCT [®] retail dealer or contact Customer Service at 810-626-3026 or at <u>contact@killercrossbows.com</u> for assistance.
#4	String and/or cables are cut or fraying	Do not use crossbow. Replace string and/or cables. Take your crossbow to an authorized KILLER INSTINCT [®] retail dealer or contact Customer Service at 810-626-3026 or at <u>contact@killercrossbows.com</u> for assistance.
#5	Unable to cock crossbow	Make sure the safety is in the "Fire" position prior to cocking the crossbow. If the safety is in the "Safe" position, follow the "Anti-Dry Fire Release Mechanism" on page 9. If questions, contact Customer Service at 810-626- 3026 or at <u>contact@killercrossbows.com</u> for assistance.
#6	Additional Problems	Take your crossbow to an authorized KILLER INSTINCT [®] retail dealer, contact Customer Service at 810-626-3026 or at <u>contact@killercrossbows.com</u> for assistance. Visit <u>www.KILLERCROSSBOWS.COM</u> for additional information.

CROSSBOW OWNER'S RECORD

FILL IN THE FOLLOWING CROSSBOW RECORD FOR QUICK REFERENCE.

CROSSBOW SERIAL NUMBER:

CROSSBOW MODEL NUMBER:

PURCHASED FROM:

PURCHASED DATE:

IMPORTANT:

REGISTER YOUR CROSSBOW AND SAVE YOUR SALES RECEIPT AND SERIAL NUMBER. THIS PROOF WILL BE REQUIRED FOR YOUR FREE INSPECTION AND IS REQUIRED SHOULD YOUR CROSSBOW EVER NEED WARRANTY SERVICE. ATTACH SALES RECEIPT TO OWNERS MANUAL FOR SAFEKEEPING.

NOTES:

QUESTIONS? - CONTACT CUSTOMER SERVICE





KILLERCROSSBOWS.COM



KILLER INSTINCT[®] LIMITED LIFETIME WARRANTY^{*}.

LIMITED LIFETIME WARRANTY. YOUR KILLER INSTINCT® CROSSBOW IS WARRANTED AGAINST ANY MANUFACTURER DEFFECTS FOR THE LIFE OF THE CROSSBOW TO THE **ORIGINAL, REGISTERED OWNER**. THIS INCLUDES ALL CROSSBOW PARTS EXCEPT STANDARD USE WEARABLE COMPONENTS (STRING, SERVING, CABLES, CABLE SLIDE), ACCESSORIES (RUBBER PARTS, ARROWS/BOLTS, ROPE COCKER, SCOPE, ETC) AND COSMETIC APPEARANCE (SCRATCHES, MARKS, CHIPS) CAUSED BY NORMAL USE AND WEAR. CONTACT YOUR AUTHORIZED KILLER INSTINCT® RETAILER OR CUSTOMER SERVICE AT 810-626-3026 OR E-MAIL AT <u>CONTACT@KILLERCROSSBOWS.COM</u> FOR WARRANTY CLAIMS. ANY AND ALL WARRANTIES, WRITTEN OR IMPLIED, ARE VOID WITH ANY ALTERATIONS TO THE CROSSBOW.

REGISTRATION TO ACTIVATE FREE LIFETIME SERVICE INSPECTION AND LIMITED LIFETIME WARRANTY

Register within 30 days of your purchase online at <u>www.killercrossbows.com</u> or mail in completed warranty card received at purchase.

FREE LIFETIME SERVICE INSPECTION

Receive a lifetime of free inspections at your KILLER INSTINCT[®] dealer every 3 years from date of purchase for original registered owner. Free inspection is not transferable. Simply take your registered crossbow with copy of original receipt to an authorized KILLER INSTINCT[®] dealer every 3 years and they will inspect bow free of cost**. 3 Year Inspection Form is available at <u>www.killercrossbows.com</u>.

SERVICING YOUR KILLER INSTINCT® CROSSBOW:

If you need repairs, have warranty issues or are up for free 3 year service inspection, take your registered crossbow with copy of original receipt to an authorized KILLER INSTINCT[®] retail dealer or contact Customer Service at 810-626-3026 or e-mail support at <u>contact@killercrossbows.com</u> for assistance.

The owner is responsible for all shipping costs for crossbows returned to Killer Instinct[™] for inspection. Note: All labor costs associated from maintenance, repairs/replacements resulting from general service or the free lifetime service inspection are the responsibility of the owner.

WARRANTY IS VOID IF

- The KILLER INSTINCT[®] crossbow is damaged from abuse, mishandling, dry-firing, alterations or modifications to the original product.
- The KILLER INSTINCT[®] crossbow is not registered within 30 days.
- The KILLER INSTINCT[®] crossbow is not the original owner
- The KILLER INSTINCT[®] crossbow is older than 3 year from date of purchase and has not received Free Lifetime Service Inspection.

LIMITATION OF LIABILITY

USE ONLY AS INTENDED. MANUFACTURER ASSUMES NO RESPONSIBILITY FOR INJURY, DAMAGE OR LOSS ARRISING FROM THE USE OF THIS PRODUCT HOWSOEVER CAUSED.

PLEASE NOTE:

KILLER INSTINCT[®] reserves the right to make substitutions on warranty coverage for any reason, including but not limited to available parts.

*Limited Lifetime Warranty to the Original Owner.

**Free inspection does not cover labor costs, freight costs, or costs associated with replacement/repair of parts of excluded from Limited Lifetime Warranty.

KILLER INSTINCT® CROSSBOWS Phone: 810-626-3026 Email: <u>contact@killercrossbows.com</u> Website: <u>www.killercrossbows.com</u> Shipping/Receiving Address: 413 List St., Suite #2 Frankenmuth, MI 48734





Distributed by: MSCKI, LLC 393 List ST. STE B Frankenmuth, MI 48734

KILLER INSTINCT[®] is a registered trademark of MSCKI, LLC. ALL RIGHTS RESERVED

QUESTIONS? - CONTACT CUSTOMER SERVICE







QUESTIONS? - CONTACT CUSTOMER SERVICE





KILLERCROSSBOWS.COM



REGISTER ONLINE FOR Limited Lifetime Guarantee!

Go to:

WWW.KILLERCROSSBOWS.COM/PAGES/REGISTER-YOUR-BOW

Easy Quick-Step Directions:

- 1. <u>https://www.killercrossbows.com/pages/register-your-bow</u>
- 2. Enter in your contact information
- 3. Enter retailer purchased from, bow model and serial number
- 4. Click Submit! Now you are covered!

Questions? We can help! Call us at: 810.626.3026 or Email: <u>contact@killercrossbows.com</u>

If you cannot register online, completely fill out registration information below, cut out only this portion of the instruction manual, put it into an envelope, place postage on envelope and mail this portion to the address below: KILLER INSTINCT[®] CUSTOMER SERVICE 393 List St., Suite B, Frankenmuth, MI 48734

REGISTERING YOUR KILLER INSTINCT® CROSSBOW BY MAIL	

LAST NAME:	FIRST NAME:		
STREET ADDRESS:			
CITY:	STATE/PROVINCE:		
ZIP/POSTAL CODE:	COUNTRY:		
PHONE:	E-MAIL:		
PURCHASE DATE (MONTH / DAY / YEAR):			
PURCHASED FROM (DEALER NAME):			
SALES PERSONS NAME:			
CROSSBOW SERIAL NUMBER:			
CROSSBOW MODEL NUMBER:			

IMPORTANT:

Register within 30 days of your purchase online at www.killercrossbows.com or mail in completed registration information received at purchase. Retain copy of sales receipt as this is required at time of free inspection and should your crossbow ever need warranty service.