



# **OWNERS INSTRUCTION MANUAL**

**MODEL 601102 - TEMPRX™ RDC 405**



# INDEX

## WARNINGS OF GREAT IMPORTANCE ARE FOUND ON FOLLOWING PAGES:

Introduction	3
Safety Information	4
No Alterations	5
Manual Safety	9
Crossbow Arrow Safety	11
Cocking Crossbow	12
Hand Placement	14
Loading & Shooting	15
Unloading	16
Maintenance	17

## OTHER WARNINGS AND CAUTIONS APPEAR THROUGHOUT THE MANUAL.

## TABLE OF CONTENTS

Registration	2
Introduction	3
Safety Information	4
No Alterations	5
Nomenclature	6
Crossbow Assembly	7
Trigger Box & Anti-Dry Fire	10
Manual Safety	10
Crossbow Arrow Safety	11
Cocking Crossbow	12
Proper Finger, Thumb & Hand Placement	14
Loading & Shooting	15
Sighting In Scope & Unloading & Decocking	16
Maintenance, Care & Storage	17
Trouble Shooting & Records	18
Warranty	19
Three-Year Inspection	22

## **⚠ WARNING**

YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE USING THIS CROSSBOW!  
CONTACT KILLER INSTINCT® AT 810-626-3026  
OR EMAIL OR [CONTACT@KILLERCROSSBOWS.COM](mailto:CONTACT@KILLERCROSSBOWS.COM) WITH QUESTIONS.  
FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!

THIS INSTRUCTION MANUAL MUST ALWAYS ACCOMPANY THIS CROSSBOW AND BE TRANSFERRED WITH IT UPON CHANGE OF OWNERSHIP, WHEN LOANED, OR PRESENTED TO ANOTHER PERSON.





**REGISTER ONLINE FOR  
LIMITED LIFETIME GUARANTEE!**

Register at:

<https://www.killerinstinctcrossbows.com/register>

**Easy Quick-Step Directions:**

1. <https://www.killerinstinctcrossbows.com/register>
2. Upload copy of receipt or proof of purchase
3. Enter in your contact information
4. Enter retailer purchased from, bow model and serial number
5. Click Submit! Now you are covered!

Questions? We can help!

Call us at: 810-626-3026 or

Email: [contact@killercrossbows.com](mailto:contact@killercrossbows.com)

**OPEN  
CAMERA**



**CLICK  
POPUUP**



**REGISTER  
YOUR CROSSBOW**



## INTRODUCTION:

Congratulations on your new Killer Instinct® crossbow purchase! Thank you for your support. Your crossbow has been designed, manufactured, tested, and delivered to be safe when used with all the instructional information provided. **Before assembly**, make the first step with your new crossbow be to read and thoroughly understand all the information and instructional materials included with this product. Read and understand the Owners Instructional Manual from cover to cover. **YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE USING THIS CROSSBOW! THIS INCLUDES ANY INFORMATION PROVIDED ON THE CROSSBOW, ARROWS, PACKAGING, HARDWARE, ACCESSORIES, OR OTHER ITEMS PROVIDED. CONTACT KILLER INSTINCT® AT 810-626-3026 OR [CONTACT@KILLERCROSSBOWS.COM](mailto:CONTACT@KILLERCROSSBOWS.COM) WITH ANY QUESTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!** When used in accordance with all the instructional information provided and with proper care and maintenance, your crossbow will provide years of service. Keep and save all instructional materials provided. If crossbow transfers ownership, loaned or presented to another person, Owners Instruction Manual must be kept with crossbow and new owner/borrower must read and understand all instructions and warnings in the Owners Instruction Manual before using crossbow. A crossbow is a deadly weapon! As such, crossbows should be treated as firearms in regards to care and safety.

The five basic rules of firearms & crossbows safety:

- Always point a firearm/crossbow in a safe direction.
- Treat every firearm/crossbow as if it were loaded and never assume a firearm/crossbow is unloaded.
- Keep your finger out of the trigger guard and off the trigger until ready to shoot.
- Keep all parts of body and clothing out of path of bow string and cables of crossbow and out of path of projectile of firearm/crossbow.
- Be sure of your target and what is beyond your target.

Crossbows by design, use a bow string and shoot projectiles at high rates of speed and should only be used by those that have completed a Hunter's Safety Course or trained by a qualified professional. Always use caution to keep all parts of body and clothing out of path of bow string and cables. High speed moving bow strings can cause serious injury if contact occurs such as finger and thumb amputation. Know your target. Projectiles that do not remain on target can cause serious injury or death. Wear safety glasses when cocking, loading and shooting any crossbow. **Think Safety First and Practice Safety First. Safety Starts with You! YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL AND ALL OTHER INSTRUCTIONAL MATERIALS PROVIDED BEFORE USING THIS CROSSBOW**

### WARNING

**CROSSBOW USE FOR EXPERIENCED USERS ONLY! CROSSBOWS SHOULD ONLY BE USED BY THOSE THAT HAVE COMPLETED A HUNTER'S SAFETY COURSE OR TRAINED BY A QUALIFIED PROFESSIONAL.**



## **⚠ WARNING**

**Crossbow is a deadly weapon! Always keep crossbow pointed in safe direction. Never point at or toward person(s) or at or toward anything you do not intend to shoot.**

**Always be certain of intended target and what is beyond it before shooting. Never shoot at noise or movement.**

**Always be aware of your surroundings and ensure no other person or animal is between you and target area.**

**Always make certain others are well behind you before you shoot.**

**Never shoot straight up or in any direction that may endanger people or other objects.**

**Never shoot at hard surfaces or at surface of water. Arrow may bounce back or ricochet and hit someone or an unintended target.**

**Always keep thumb and fingers below flight rail, string, barrel and behind cables.**

**To prevent accidental discharge, always keep crossbow safety on 'SAFE'. Only position safety to 'FIRE' when ready to shoot.**

**Never store or transport crossbow in cocked or loaded position. Accidental discharge could occur.**

**Keep crossbow out of reach of children!**

**Always wear full body harness (not included) that has been certified by a Third Party Testing Facility that meets or exceeds Industry Standards when hunting from treestand or at heights.**

**FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!**

## **IMPORTANT SAFETY INFORMATION:**

- Never dry fire crossbow (fire without arrow loaded). This will void warranty, damage crossbow and may cause serious injury or death. Loading arrow incorrectly could also result in dry fire.
- Never put your finger on trigger until you are ready to shoot as you could accidentally fire crossbow causing serious injury or death
- Do not modify crossbow or remove or deactivate crossbow's safety features.
- Never walk, stalk, or carry crossbow with arrow loaded in crossbow. It is acceptable to carry a cocked but unloaded crossbow.
- Always use caution to keep all parts of body and clothing out of path of bow string and cables.
- Never fire crossbow if branches, tree, blind windows/walls, or obstructions may contact crossbow or crossbow limbs in its release path.
- Always keep crossbow string and cables away from sharp objects as they may cut string or cables. DO NOT use if string or cables are cut or show signs of wear, contact Killer Instinct® at 810-626-3026 or e-mail support at [contact@killercrossbows.com](mailto:contact@killercrossbows.com) or take to an authorized Killer Instinct® dealer for inspection.
- If under age of 18 do not use without adult supervision.
- Always place broadheads in quiver when transporting or storing crossbow to prevent contact with string/cables.
- Never use crossbow while taking or under influence of drugs (even prescription drugs) or alcohol.
- Wear safety glasses when cocking, loading and shooting any crossbow.
- Always obey all safety rules and laws covering ownership and use of this crossbow in your state, hunting or shooting area. Locate and read all such rules prior to using crossbow.
- Only use crossbow for intended use of hunting and target shooting. Do not use for any other purpose!



## IMPORTANT SAFETY INFORMATION CONTINUED:

- Do not climb up or down a tree with crossbow or hoist loaded crossbow. Always unload crossbow and use hoist rope to lift up and down tree or elevated hunting platform.
- Never modify your crossbow in any way by making repairs, replacing parts, altering, adding or attaching anything to it other than Killer Instinct® accessories designed specifically for Killer Instinct® crossbows.
- When target practicing, always set up proper crossbow target and backstop in safe open area with nothing beyond target you do not intend to shoot.
- When cocking crossbow, use proper lifting techniques to avoid injury to back (lift with arms and shoulders).
- Never use this product when feeling ill, nauseous, dizzy or if you have pre-existing medical condition that could cause a problem cocking or shooting crossbow.
- Examine crossbow and arrows after every shot for worn, loose, damaged or missing parts and cracks or damage to arrows. If damage is suspected, DO NOT use crossbow and arrow(s), contact Killer Instinct® at 810-626-3026 or e-mail support at [contact@killercrossbows.com](mailto:contact@killercrossbows.com).
- Do not use crossbow if it is not in top working condition, contact Killer Instinct® at 810-626-3026 or e-mail support at [contact@killercrossbows.com](mailto:contact@killercrossbows.com) for assistance.

## NO ALTERATIONS OR ADJUSTMENTS:

### **WARNING**

**Do not modify, remove, or deactivate crossbow's safety features.**

**Do not modify crossbow in any way by making repairs, replacing parts, altering, adding or attaching anything to it.**

### **DO NOT ALTER CROSSBOW!**

This product is designed to function properly in its original condition. Alterations can make it unsafe. Do not alter, add, or substitute parts or accessories not made by Killer Instinct®.

### **DO NOT TIGHTEN OR LOOSEN LIMB BOLTS!**

Do not attempt to adjust limb bolts by tightening or loosening bolts. Limb bolts are factory adjusted to specific torque specifications to optimize crossbow performance.


Do not attempt to change string, cables or limbs without proper tools and instruction. Always have qualified Killer Instinct® professional or authorized Killer Instinct® dealer perform these maintenance procedures.

NOTE: A crossbow press and qualified technician is required to change/install string, cables, limbs, cam assemblies, etc.



## TEMPRX™ RDC NOMENCLATURE:

- Unpack and Check
- Review & Confirm all items are included in Parts List. If they are not, stop and contact Killer Instinct® customer service before continuing or using this product.

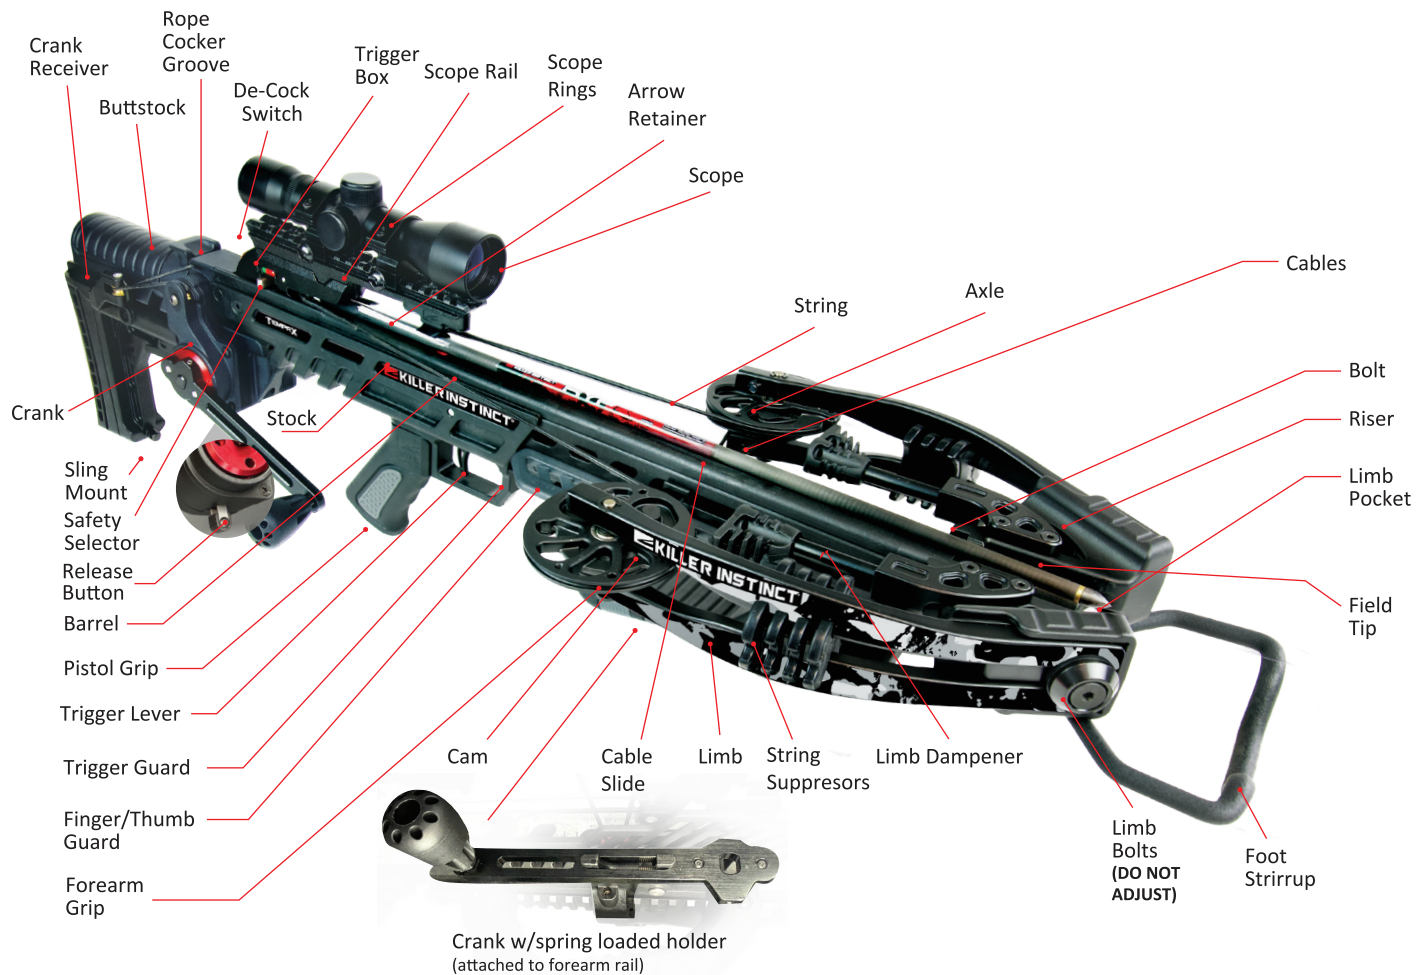

### Included in the Box

- (1) Stock Assembly (Stock, Trigger Box, Grip, Forearm Grip)
- (1) Front End Riser Assembly (String Stops)
- (1) 4x32 Scope, Scope Rings, Scope Caps
- 20" Hypr™ Bolts w/ V-Nocks
- (1) Accessory Pack including Cable Slide, Rail Lube, Foot Stirrup, Rope Cocker, Quiver Bracket w/ Side Bracket and Safety Manual
- (1) Crank, Spring loaded crank handle holder



**KEEP THUMB / FINGERS  
ON FOREARM GRIP  
AND BELOW FLIGHT  
RAIL AND CABLES**



**Note: Actual model may differ than one shown.  
Not shown: Quiver System**



810-626-3026



KILLERINSTINCTCROSSBOWS.COM



CONTACT@KILLERCROSSBOWS.COM

Page 6 of 22 1/2025

## ⚠ WARNING

**DO NOT MODIFY CROSSBOW! QUESTIONS CALL 810-626-3026**

**Do not modify, remove, or deactivate crossbow's safety features.**

**Do not modify crossbow in any way by making repairs, replacing parts, altering, adding or attaching anything to it.**



**Killer Instinct® and Killer Instinct® authorized dealers are the only repair facilities authorized to open or disassemble crossbow or make repairs/replacements of strings, serving, cables, limbs, trigger boxes, barrels, etc. Unauthorized repairs may void warranty. If repairs are needed, contact Customer Service at 810-626-3026 or e-mail support at [contact@killercrossbows.com](mailto:contact@killercrossbows.com) for assistance.**

### RAIL LUBE


**PRIOR TO ASSEMBLY** apply Rail Lube to string, cables, both sides of cable slide, and flight rail. RAIL LUBE MUST BE APPLIED TO STRING, CABLES AND FLIGHT RAIL ON REGULAR BASIS TO PREVENT WEAR. Apply as often as needed or when rail lube appears to have worn off flight rail, string or cables.

### ATTACHING FRONT END TO BARREL AND INSTALLING FOOT STIRRUP

- #1 Attach the Cable Slide to the Cables to the right of the cross in the Cables. The cables fit into the grooves on the bottom of the Cable Slide. The deeper groove in the Cable Slide is intended for the top crossing cable. Make sure the curved side of the Cable Slide is facing up when the top of the Riser is facing up.

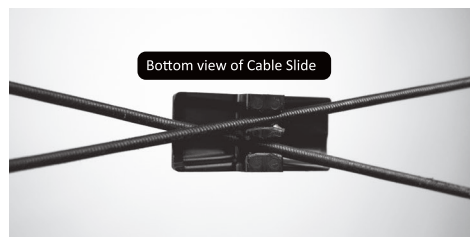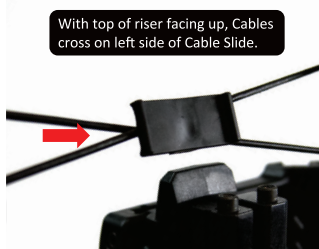


- #2 Slide the Cable Slide into the stock with the string on top of the barrel.

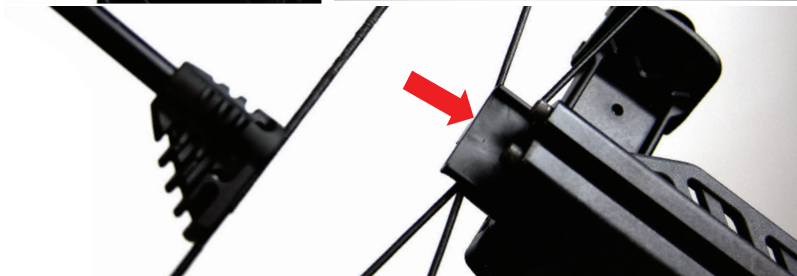


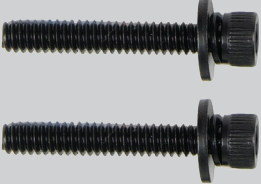



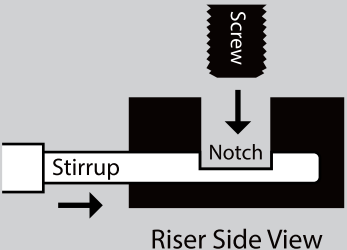
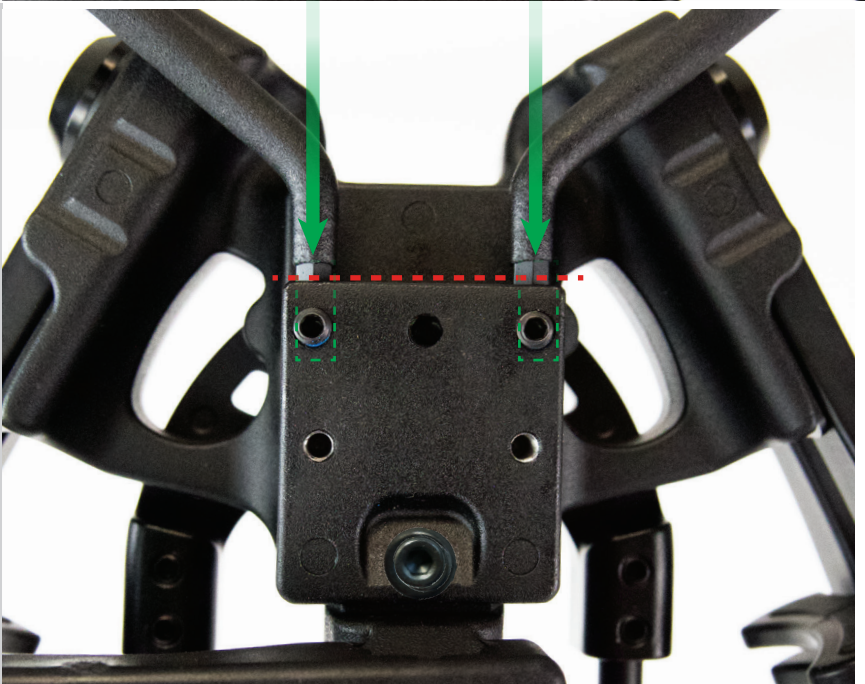
- #3 Holding Cable Slide in place (Riser and Stock facing up), insert the Cable Slide and Cables into the Stock so the groove on the Cable Slide aligns with the groove in the stock. Continue inserting the Cable Slide and cables into the Stock while keeping the String on top of the Barrel.

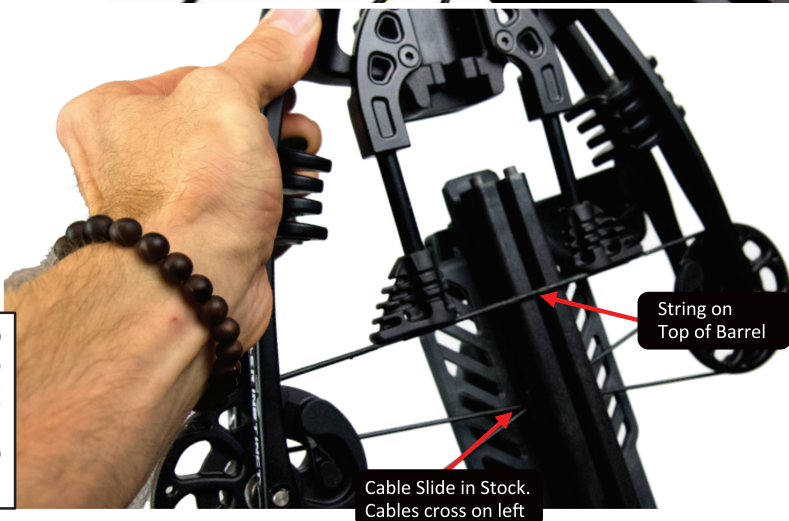

**CAREFULLY INSERT CABLES AND CABLE SLIDE INTO BARREL SLOT TO PREVENT CABLE PINCHING OR CABLE CONTACT WITH EDGES OF BARREL! CABLE SLIDE MUST BE INSTALLED BEFORE ATTACHING FRONT END!**




# CROSSBOW ASSEMBLY CONTINUED:

STEP	INSTRUCTION	IMAGE
#4	Push riser completely overtop of barrel, making sure riser lines up with barrel.	
#5	<p>With cable slide and bowstring properly positioned, assemble riser onto the barrel by using (2) 3/16 bolts as shown.</p>  <p>Turn riser over and assemble (1) 3/16 bolt as shown.</p>  <p>Double check that all 3 bolts are securely tightened.</p>	<p><b>Warning!</b> Do not overtighten. Apply a maximum of 2.0 lb-ft of torque when tightening riser hardware</p>  
#6	<p>Rotate bow over and Insert foot stirrup to front of riser so foot stirrup notches line up with set screw holes in riser.</p> <p>Using included set screws, securely tighten foot stirrup to riser as shown.</p> <p>Double check that all bolts are securely tightened.</p> 	



## CROSSBOW ASSEMBLY CONTINUED:

STEP	INSTRUCTION	IMAGE
#7	<b>ASSEMBLE SCOPE</b> Attach scope to the picatinny rail on top of the trigger box using included scope rings and hardware.	
#8	Loosen top scope ring screws if the scope ring mounting screws do not fit into (2) picatinny rail grooves.  Always make sure that the mounting screws on the scope rings are fully seated in the picatinny rail grooves, scope ring clamps are flush with underside of picatinny rail and all screws are tight.	
#9	<b>ASSEMBLE QUIVER</b> Attach quiver bracket to picatinny rail on finger guard. Tighten (2) 3/16 HEX quiver bracket mounting screws aligning each one into the grooves of the picatinny rail.	
#10	Attach quiver to quiver base by sliding quiver into open end of quiver base.	
#11	Secure quiver by closing quiver base lever.	

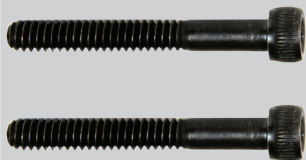

## TRIGGER BOX AND ANTI DRY-FIRE:

### ⚠ WARNING

Never deactivate Anti-Dry Fire mechanism and move safety to 'FIRE' when crossbow arrow is not loaded. This deactivates Anti-Dry Fire allowing crossbow to be dry fired.

Never Dry Fire crossbow. This will void warranty and may cause serious injury or death.

Always keep crossbow safety in 'SAFE' position until ready to shoot.



### ANTI-DRY FIRE RELEASE MECHANISM:

When crossbow is uncocked, the manual safety is designed to be in the 'FIRE' position as shown above. The auto engaging manual safety will travel from the 'FIRE' position to 'SAFE' position when the crossbow is properly cocked. The anti-dry fire mechanism will not allow the manual safety to move into the 'FIRE' position until an arrow is properly loaded. (see Loading and Shooting – Page 14).

## OPERATION OF TRIGGER BOX MANUAL SAFETY:

### ⚠ WARNING

Even though crossbow is equipped with auto engaging safety, always check to assure safety is in 'SAFE' position when crossbow is in cocked position. Always keep crossbow safety in 'SAFE' position until ready to shoot.

#### INSTRUCTION


#### IMAGE

### SAFETY IN 'SAFE' (S) POSITION

Safety is in 'SAFE' position when manual safety is in back position (furthest from string).



Always keep crossbow safety in 'SAFE' position until ready to shoot.

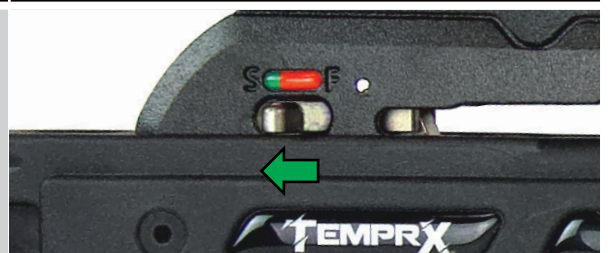


### SAFETY IN 'FIRE' (F) POSITION

Safety is in 'FIRE' position when safety is in forward position (closest to string).



Crossbow will fire when trigger is pulled.

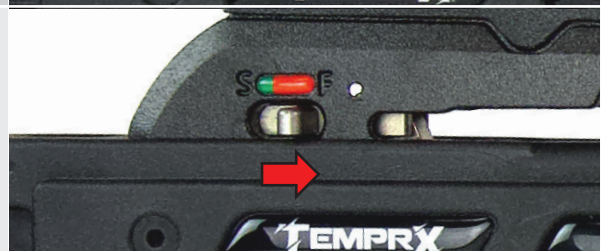

## CROSSBOW ARROW SAFETY:

### **WARNING**

Only use arrow(s) with half moon nocks AND KI V-nocks.

Only use finished arrow(s) (arrow and point) weighing at least 370 grains and minimum length 20 inches. Under weight arrows can damage crossbow. Failure to follow these instructions can result in serious injury or death!

### CROSSBOW ARROW SELECTION:

Always use a finished arrow(s) (arrow and point) weighing at least 370 grains and minimum length of 20 in.

Always use field point or broadhead installed on arrow. NEVER SHOOT CROSSBOW ARROW WITHOUT FIELD POINT OR BROADHEAD.

### **WARNING**

Always inspect arrow(s) before every shot for damage including but not limited to bends, cracks, nicks, cuts, fractures, damaged nock, missing insert or point. DO NOT SHOOT A DAMAGED ARROW OR IF DAMAGE IS SUSPECTED. Failure to follow these instructions can result in serious injury or death!

### INSPECTING CROSSBOW ARROWS:

Always inspect arrow prior to every shot. Damage can occur from impacts with hard objects, other arrows or after being shot into a game animal. A damaged arrow can break upon shot resulting in injury to you, bystanders and damage crossbow.

1. Slowly run your fingers along entire length of arrow and nock, feeling and looking for bends, cracks, nicks, cuts, fractures, splits, dents or other marks that could indicate damage. If damaged or suspect damage do not shoot arrow.
2. Grab arrow above point and below nock, then flex arrow (bending away from you and others) with 0.5 to 1 inch deflection and listen for cracking noises. Repeat 5 or 6 times rotating arrow between each flex. If you feel or hear cracking, arrow has been damaged. Do not shoot arrow.
3. While holding both ends of arrow, twist shaft in both directions. If arrow relaxes or twists easily, arrow has been damaged. Do not shoot arrow.
4. Always check all arrow components prior to shooting. Tighten loose components. Loose components can cause unbalanced flight and may partial dry fire crossbow.

### **WARNING**

Never shoot crossbow arrow(s) if you observe or suspect damage! Discard damaged arrow.

VISIT: [WWW.SAFEARROW.INFO](http://WWW.SAFEARROW.INFO)

For more information on crossbow arrow safety, visit: [www.safearrow.info](http://www.safearrow.info) prior to using your crossbow.




# COCKING CROSSBOW: INTEGRATED CRANK

STEP	INSTRUCTION	IMAGE
#1	<p><b>COCKING CROSSBOW WITH RDC™</b></p> <p>Push and hold the release button on the crank upwards to release the sled from back. Using your other hand, pull the sled toward the string at the same time.</p> <p><b>ATTACH SLED TO CROSSBOW STRING</b></p> <p>Attach the sled to the crossbow string as shown with the sled over the string center on barrel.</p> <p>Note: Always make sure the crank ropes are not twisted and the sled is fully attached.</p>	
#2	<p><b>BEGIN TO CRANK</b></p> <p>Attach the ambidextrous crank handle aligning posts and hole inserting on the left or right side of the crank.</p> <p>With the safety in the 'Fire (F)' position, begin cranking until the crossbow's string engages the string catch. When properly cocked, the safety will move to the 'Safe (S)' position.</p> <div data-bbox="139 1130 214 1207"> </div> <p><b>WARNING: NEVER OVER CRANK COCKING DEVICE AS THIS MAY DAMAGE CRANK COCKER OR CROSSBOW.</b></p>	
#3	<p><b>REMOVE SLED FROM THE CROSSBOW STRING</b></p> <p>Once the string engages the string catch, (1) crank handle slightly to relieve tension on the crank. (2) Holding crank handle, press and hold the release button using your other hand and (3) begin cranking in the opposite direction.</p> <p>Note: If crossbow string moves forward with sled when release button is pressed, stop immediately. Crossbow string is not engaged on string catch. Repeat step #2.</p> <p><b>WARNING: ALWAYS MAKE SURE CROSSBOW IS FULLY COCKED AND CROSSBOW SAFETY IS IN THE 'SAFE (S)' POSITION BEFORE REMOVING CRANK.</b></p> <p>Remove sled from the crossbow string and mount them back on the buttstock sled. Remove crank handle before operating the crossbow.</p> <p><b>WARNING: ALWAYS KEEP YOUR HANDS AND FINGERS CLEAR OF THE CROSSBOW STRING PATH. NEVER SHOOT CROSSBOW WITH CRANK SLED ATTACHED TO THE CROSSBOW STRING. FOLLOW UNLOADING CROSSBOW INSTRUCTIONS ON PAGE 14.</b></p>	



# COCKING CROSSBOW:

STEP	INSTRUCTION	IMAGE
#1	With flight rail, string and cables foot stirrup on the ground (stirrup on the ground and butt stock up). Place foot through the foot stirrup.	
#2	Position the Rope Cocker Sled in the center of the Rope Cocker rope. Holding the Sled in one hand, place the center of the rope cocker rope in the Rope Cocker Groove on the buttstock.	
#3	Leaning over crossbow, extend sled over the scope and attach to the string as shown.	
#4	<p><b>COCKING WITH ROPE COCKER</b>            Keeping foot and stirrup flat on ground, grab handles and pull up and back towards your hips (using legs, shoulders and arms) until string fully engages into trigger box assembly. Slowly release tension and remove Rope Cocker Sled from the crossbow. Crossbow is now Cocked.</p> <div data-bbox="125 1275 649 1499"> <div>  <p>ALWAYS MAKE SURE STRING FULLY ENGAGES STRING CATCH BEFORE RELEASING TENSION ON ROPE COCKER.</p> </div> <div>  <p>KEEP HANDS AND FINGERS OUT OF STRING PATH WHEN REMOVING HOOKS AFTER COCKING CROSSBOW.</p> </div> </div> <p>Keep crossbow angled away from body.            When cocking, pull rope handles inward.</p>	 
#5	Even though safety automatically engages when cocked, make certain crossbow is in 'SAFE' position (back position furthest from string).	



## PROPER FINGER, THUMB, AND HAND PLACEMENT:

### ⚠️ WARNING

Always keep thumb and fingers below string, flight rail, barrel and behind / below cables. Failure to do so may result in serious injury to hand, including possible thumb or finger amputation.



### INSTRUCTION

### IMAGE

## CORRECT!

Keep trigger hand on grip behind trigger. Always keep other hand securely gripping Forearm Grip with fingers and thumb below strings path, flight rail, barrel and behind / below cables.



READY TO SHOOT!

## INCORRECT!



THUMB OR FINGERS ABOVE BARREL AND IN STRINGS PATH! DO NOT SHOOT!

STOP! DO NOT SHOOT!



## INCORRECT!



THUMB, FINGERS OR HAND OFF OR BEHIND OR IN FRONT OF FOREARM GRIP AND ABOVE BARREL! DO NOT SHOOT!


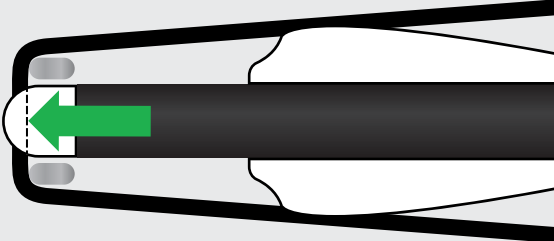


STOP! DO NOT SHOOT!



LOADING AND SHOOTING:

⚠️WARNING

Even though crossbow is equipped with anti-dry-fire device, do not pull trigger without arrow properly loaded.  
Always keep crossbow safety in 'SAFE' position until ready to shoot.

STEP	INSTRUCTION	IMAGE
#1	Keeping hand in 'Safe Loading Area' place a Killer Instinct® recommended crossbow arrow into flight groove on top of barrel (odd color vane down) into flight groove ensuring curve of nock matches curve of string. If not, orientate crossbow arrow so nock curve matches string curve.	
#2	Keeping hand in 'Safe Loading Area', slide arrow back under arrow retainer until curve of nock rests solidly against string. <b>Arrow must be against string before firing!</b>	
<div></div> <p>Always keep crossbow aimed in safe direction during loading arrow and when loaded. Before shooting always make sure arrow nock rests firmly next to string to prevent dry firing crossbow, which could cause bodily injury and/or void warranty.</p>		
#3	Crossbow is ready to shoot. With fingers/thumb on forearm grip, aim, push safety to 'FIRE' position and slowly squeeze trigger to shoot.	

⚠️WARNING

Always keep crossbow safety in 'SAFE' position until ready to shoot.  
Always keep thumb, fingers and any other body appendages below and away from flight rail, string, barrel, cables and cams.  
Never shoot without arrow or arrow firmly next to string.  
Always keep crossbow aimed in safe direction during loading and when loaded.  
Always be certain of intended target and what is beyond it before shooting.  
Never shoot straight up or in any direction that may endanger people or other objects.  
Never shoot at hard surfaces or at surface of water. Arrow may be damaged, bounce back or ricochet and hit someone or an unintended target.  
**FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!**




## SIGHTING IN SCOPE:

- #1 Shoot at 10 yards using top scope reticle to confirm you are close to bullseye. Make windage/elevation adjustments to get closer to bullseye. **Approximately 16 clicks = 1" @ 20 yards.** Increase distance to 20 yards and fine tune scope. Continue shooting at additional yardages using lower scope reticles. Lower reticles are for greater distances.

**NOTE:** Each reticle line represents approximately 10 yard increments (using 400 grain total arrow weight). This may vary with aftermarket arrows and different weight field tips / broadheads.

**SHOOTING TIP:** For increased accuracy and tighter groups, follow through with your shot by watching arrow hit target through scope.

### 1 SHOOT AT 10 YARDS AIMING WITH THE CENTER OF THE CROSSHAIR

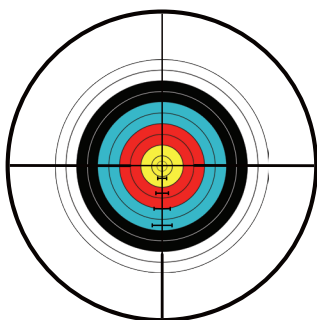

### 2 ADJUST SCOPE RETICLE TOWARDS POINT OF AIM (BULLSEYE) UNTIL ZEROED IN

TOP TURRET: ELEVATION  
(UP & DOWN)

(UP): COUNTER-CLOCKWISE  
(DOWN): CLOCKWISE

RIGHT TURRET: WINDAGE  
(LEFT & RIGHT)

(LEFT): CLOCKWISE  
(RIGHT): COUNTER-CLOCKWISE




### 3 MOVE TO 20 YARDS AND RE-ZERO CENTER SCOPE RETICLE

EXAMPLE: SHOT HITS 1" LEFT, 2" HIGH

- ADJUST WINDAGE (SIDE TURRET) COUNTER-CLOCKWISE 16 CLICKS.
- ADJUST ELEVATION (TOP TURRET) CLOCKWISE 32 CLICKS.

ADJUST  
SIDE TURRET  
RIGHT 1"  
(16 CLICKS)

ADJUST  
TOP TURRET  
DOWN 2"  
(32 CLICKS)

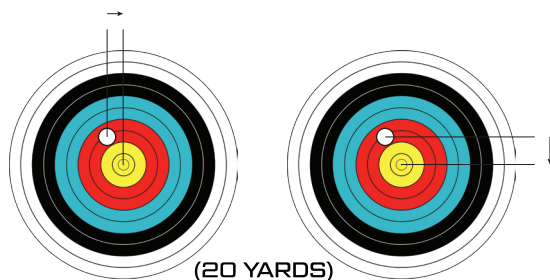

## UNLOADING & DECOCKING CROSSBOW:

### ⚠ WARNING

Always use Killer Instinct® recommended arrow to unload crossbow.

Do not de-cock crossbow by hand, cocking rope or crank or by any other means other than shooting an arrow or appropriate discharge arrow.

### UNLOADING CROSSBOW:

Recommended and safest way to unload crossbow is to fire arrow into suitable target or rock-free ground. If firing into ground, make sure ground is not frozen or hard and shoot at point approximately 4 to 5 feet in front of you at 45 degree angle. Firing at greater distances may result in lost arrow in dirt or ricochet.

### TIME ALLOWED TO KEEP CROSSBOW COCKED:

Crossbow can remain cocked 12 hours. Do not leave crossbow cocked overnight or when transporting.



## MAINTENANCE, CARE AND STORAGE:

### WARNING

Always examine crossbow and crossbow arrows after every shot for worn, loose, damaged or missing parts and cracks or damage to arrows. **DO NOT** use worn or damaged crossbow or crossbow arrow(s). Always store crossbow uncocked and out of reach of children.

SCHEDULE	MAINTENANCE
PRIOR TO EVERY SHOT	Thoroughly check crossbow and crossbow arrow for worn, loose, damaged or missing parts every time you use crossbow. Do not use worn or damaged crossbow or crossbow arrow(s).
PRIOR TO EVERY SHOT	Check and confirm arrow retainer is in good working order as it is designed to apply consistent downward pressure on arrow.
PRIOR TO FIRST SHOT EVERY 5 – 10 SHOTS	Lube flight rail with Killer Instinct® rail lube to increase arrow speed and reduce friction to extend life of string, serving and cables. Re-apply rail lube on flight rail, string and cables as often as needed or after every 5 to 10 shots.
AFTER INITIAL 20 SHOTS ANNUALLY OR AS NEEDED	Check screws/bolts for tightness on crossbow scope base, scope rings, riser bolts, quiver base and string suppressors.
ANNUALLY OR AS NEEDED	Annually or as needed apply rail lube to cable slide.
IMMEDIATE IF WEAR IS DETECTED EVERY 2 YEARS	Immediately replace worn, cut or frayed string, serving and cables prior to shooting. Keep string, serving and cables lubed with Killer Instinct® rail lube. Killer Instinct® recommends replacing string, serving and cables every three years in normal hunting/shooting conditions or sooner if signs of wear exist.
EVERY 3 YEARS	To maintain your Limited Lifetime Warranty, you must have service inspections every 3 years.
IMPORTANT	Killer Instinct® and Killer Instinct® authorized dealers are the only repair facilities authorized to open or disassemble crossbow or make repairs/replacements of strings, serving, cables, limbs, trigger boxes, barrels, etc. Unauthorized repairs may void warranty. If repairs are needed, contact Customer Service at 810-626-3026 or e-mail support at <a href="mailto:contact@killercrossbows.com">contact@killercrossbows.com</a> for assistance.

## CARE

Keep flight rail, cams, cables, string, trigger box and trigger clean and free of debris, mud, dirt, etc.

After exposing crossbow to damp or wet conditions, completely dry off crossbow before storing.

Do not expose crossbow in excessive heat such as leaving in an automobile on a hot day.

## STORAGE

Store crossbow in uncocked position and out of reach of children.

Store indoors in a cool dry location away from excessive heat and moisture.



## TROUBLE SHOOTING:

	PROBLEM	SOLUTION
#1	Burning smell after shot	Re-apply Killer Instinct® rail lube to flight rail, string, cables and/or cable slide. Keep fingers out of cable slot on barrel.
#2	String, serving and/or cables are fuzzy	Apply thin coating of Killer Instinct® rail lube on string, serving and cables and rub lube into string and cables rubbing between your fingers.
#3	String and/or cable serving is coming apart or separating	<b>Do not use crossbow.</b> Replace string and cable or reserve string and cable. Take your crossbow to an authorized Killer Instinct® retail dealer or contact Customer Service at 810-626-3026 or at <a href="mailto:contact@killercrossbows.com">contact@killercrossbows.com</a> for assistance.
#4	String and/or cables are cut or fraying	<b>Do not use crossbow.</b> Replace string and/or cables. Take your crossbow to an authorized Killer Instinct® retail dealer or contact Customer Service at 810-626-3026 or at <a href="mailto:contact@killercrossbows.com">contact@killercrossbows.com</a> for assistance.
#5	Unable to cock crossbow	Make sure the safety is in the "Fire" position prior to cocking the crossbow. If the safety is in the "Safe" position, follow the "Anti-Dry Fire Release Mechanism" on page 10. If questions, contact Customer Service at 810-626-3026 or at <a href="mailto:contact@killercrossbows.com">contact@killercrossbows.com</a> for assistance.
#6	Additional Problems	Take your crossbow to an authorized Killer Instinct® retail dealer, contact Customer Service at 810-626-3026 or at <a href="mailto:contact@killercrossbows.com">contact@killercrossbows.com</a> for assistance. Visit <a href="http://www.huntkillerinstinct.com">www.huntkillerinstinct.com</a> for additional information.

## CROSSBOW OWNER'S RECORD

FILL IN THE FOLLOWING CROSSBOW RECORDS FOR QUICK REFERENCE.

**CROSSBOW SERIAL NUMBER:**

**CROSSBOW MODEL NUMBER:**

**PURCHASED FROM:**

**PURCHASED DATE:**

### IMPORTANT:

REGISTER YOUR CROSSBOW AND SAVE YOUR SALES RECEIPT AND SERIAL NUMBER. THIS PROOF WILL BE REQUIRED FOR YOUR FREE INSPECTION AND IS REQUIRED SHOULD YOUR CROSSBOW EVER NEED WARRANTY SERVICE.

ATTACH SALES RECEIPT TO OWNERS MANUAL FOR SAFEKEEPING.

### NOTES:




# KILLER INSTINCT LIMITED LIFETIME WARRANTY

## LIMITED LIFETIME WARRANTY

Your Killer Instinct® crossbow is covered by a Limited Lifetime Warranty to the original, registered owner, which protects against manufacturer defects. The limbs of the crossbow are covered by a 5-Year Limited Warranty to the original, registered owner, also against manufacturer defects. The scope, quiver, and other peripheral accessories are covered by a 1-Year Warranty to the original, registered owner, subject to manufacturer defects. This warranty applies to all crossbow parts, excluding standard wearable components, including but not limited to the string, serving, cables, cable slide, crossbow bolts, and any accessories not specifically listed. Cosmetic damage resulting from normal wear and tear (e.g., scratches, marks, chips) is not covered under warranty. Labor costs associated with repairs or routine maintenance are not covered and are the responsibility of the owner. For warranty claims, please contact your authorized Killer Instinct® retailer or customer service at 810-626-3026 or visit our website. Any and all warranties, whether written or implied, shall be voided in the event of any alterations made to the crossbow.

## REGISTRATION TO ACTIVATE LIMITED LIFETIME WARRANTY

Register within 60 days of your purchase online at [www.Killerinstinctcrossbows.com](http://www.Killerinstinctcrossbows.com).

## PROPER SERVICE AND MAINTAINANCE IS REQUIRED

Failure to properly maintain your crossbow including regular string/cable maintenance, proper lubrication, etc. will void warranty. Any costs associated with inspection, repair costs or freight costs are the responsibility of the crossbow owner. Please visit [www.killerinstinctcrossbows.com](http://www.killerinstinctcrossbows.com) to download your required service form. The completed service form must be received by Killer Instinct Inc. to continue limited lifetime warranty.

## REQUIRED 3-YEAR SERVICE INSPECTION

Failure to properly maintain your crossbow, including but not limited to regular string and cable maintenance, proper lubrication, and other requisite care, shall result in the voiding of the warranty. To preserve the validity of your limited lifetime warranty, product inspections must be conducted every three (3) years from the date of purchase by authorized KILLER INSTINCT™ Dealers. The costs associated with such inspections, including but not limited to inspection fees, repairs, and freight, shall be the sole responsibility of the crossbow owner. To maintain eligibility for the limited lifetime warranty, the completed inspection form must be submitted and received by KILLER INSTINCT™. You can download the [required inspection form here](#).

## SERVICING YOUR KILLER INSTINCT® CROSSBOW:

If you need repairs, have warranty issues or need your 3 year service inspection, take your registered crossbow with copy of original receipt to an authorized Killer Instinct® retail dealer or contact Customer Service at 810-626-3026 or visit <https://killerinstinctcrossbows.com/customer-service/contact-customer-service> assistance.

The owner is responsible for all shipping costs for crossbows returned to Killer Instinct® for inspection.

All labor costs associated with maintenance, repairs/replacements resulting from general service, or the free lifetime service inspection are the responsibility of the owner.

Strings and cables are classified as wearable components and, as such, are excluded from coverage under the warranty. The use of aftermarket strings and cables may result in the voiding of the warranty. Any front-end service performed may necessitate the installation of new strings and cables, which shall be the sole responsibility of the owner as part of routine maintenance. Components that are worn and not covered under warranty are not eligible for reuse.

## WARRANTY IS VOID IF

- The Killer Instinct® crossbow is damaged from accidents, abuse, mishandling, dry-firing, alterations or modifications to the original product.
- Damage caused by crossbow bolt failure is not covered under warranty.
- The Killer Instinct® crossbow is not registered within 60 days.
- The Killer Instinct® crossbow is not the original owner.

## LIMITATION OF LIABILITY

USE ONLY AS INTENDED. MANUFACTURER ASSUMES NO RESPONSIBILITY FOR INJURY, DAMAGE OR LOSS ARISING FROM THE USE OF THIS PRODUCT HOWSOEVER CAUSED.

## PLEASE NOTE:

Killer Instinct® reserves the right to make substitutions on warranty coverage for any reason, including but not limited to available parts.

Revised: 1-2025

\*Limited Lifetime Warranty to the Original Owner.

\*\*Free inspection does not cover labor costs, freight costs, or costs associated with replacement/repair of parts of excluded from Limited Lifetime Warranty.

Killer Instinct® Crossbows Phone: 810-626-3026 Website:  
[www.Killerinstinctcrossbows.com](http://www.Killerinstinctcrossbows.com)

Receiving Address: 393 List St., Suite B  
Frankenmuth, MI 48734



Distributed by: KILLER INSTINCT INC.  
393 List St. Ste B Frankenmuth,  
MI 48734  
KILLER INSTINCT® is a registered trademark of  
KILLERINSTINCT INC. ALL RIGHTS RESERVED



810-626-3026



KILLERINSTINCTCROSSBOWS.COM



CONTACT@KILLERCROSSBOWS.COM

Page 19 of 22 1/2025



## REGISTER ONLINE FOR LIMITED LIFETIME GUARANTEE!

Register at:

[HTTPS://WWW.KILLERCROSSBOWS.COM/REGISTER](https://www.killercrossbows.com/register)



### Easy Quick-Step Directions:

1. <https://www.killercrossbows.com/Register>
2. Enter in your contact information
3. Enter retailer purchased from, bow model and serial number
4. Click Submit! Now you are covered!

Questions? We can help!

Call us at: 810-626-3026 or

Email: [contact@killercrossbows.com](mailto:contact@killercrossbows.com)

If you cannot register online, completely fill out registration information below, cut out only this portion of the instruction manual, put it into an envelope, place postage on envelope and mail this portion to the address below:

KILLER INSTINCT® CUSTOMER SERVICE  
393 List St., Suite B,  
Frankenmuth, MI 48734

### REGISTERING YOUR KILLER INSTINCT® CROSSBOW BY MAIL

LAST NAME:	<input type="text"/>	FIRST NAME:	<input type="text"/>
STREET ADDRESS:	<input type="text"/>		
CITY:	<input type="text"/>	STATE/PROVINCE:	<input type="text"/>
ZIP/POSTAL CODE:	<input type="text"/>	COUNTRY:	<input type="text"/>
PHONE:	<input type="text"/>	E-MAIL:	<input type="text"/>
PURCHASE DATE (MONTH / DAY / YEAR):		<input type="text"/>	
PURCHASED FROM (DEALER NAME):		<input type="text"/>	
SALES PERSONS NAME:		<input type="text"/>	
CROSSBOW SERIAL NUMBER:		<input type="text"/>	
CROSSBOW MODEL NUMBER:		<input type="text"/>	

#### IMPORTANT:

Register within 60 days of your purchase online at <https://www.killercrossbows.com/Register> or mail in completed registration information received at purchase. Retain copy of sales receipt as this is required at time of free inspection and should your crossbow ever need warranty.



**NOTES:**

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

# KILLER INSTINCT®

## Three-Year Visual Crossbow Inspection

### Owner Info

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip code: \_\_\_\_\_

### Product Info

Crossbow Model: \_\_\_\_\_

Crossbow Serial Number: \_\_\_\_\_

Purchased From: \_\_\_\_\_

### Dealer Info

Dealer Name: \_\_\_\_\_

Authorized Killer Instinct Dealer: Yes No

Employee's name that completed inspection: \_\_\_\_\_

Inspection Date: \_\_\_\_\_

Service Required: Yes No

If yes, please list services performed: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

### Service Inspection Guidelines

Visually inspect all working components including: Limbs, Cams, Safety devices, String / Cables, Cam timing, Stock, Flight Rail, and cable slide.

\*\* Visual inspection does not cover cost associated with replacement / repair of components \*\*

KILLER INSTINCT® is passionately committed to deadly performance technical products – Precision, Accuracy and Dependability. Killer Instinct, LLC is a privately-held company in Frankenmuth, MI. Learn more @ [killercrossbows.com](http://killercrossbows.com)

393 List STSTE B | Frankenmuth | MI | 810 626 3026 | [contact@killercrossbows.com](mailto:contact@killercrossbows.com)





[KILLERINSTINCTCROSSBOWS.COM](http://KILLERINSTINCTCROSSBOWS.COM)